

DUST FREE at Last!

One of the most common complaints that Nail Technicians have is ALL THE DUST!

There's dust on your desk, the floor, your clothes and, of course, up your nose. Even with continuous cleaning, dust can become a health hazard you want to avoid.

Nail Technicians traditionally use dust fans that capture 50 - 75% of the dust along with masks that provide additional protection.

You need a better solution:

nailbasics is pleased to present the **TIMAL™** dust extractor attachment for the MT20. Manufactured by *nailbasics*, specifically for the Erica's MT20, the **TIMAL™** will capture 99% of all airborne dust, and can be used with most vacuums*.


2



3



4

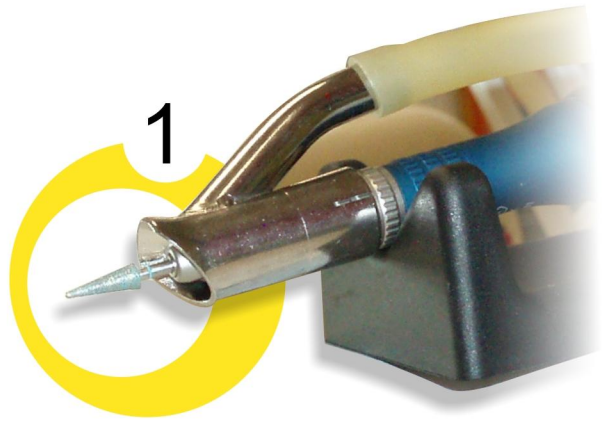

TIMAL™
Patent Pending

Set up starts here:

Along with a vacuum (available separately), there are four basic components designed to create a healthier, cleaner workspace for you and your clients:

1. The **TIMAL™** Stainless Steel extractor attachment (see photo above)
2. Adjustable vacuum regulator (see photos to the left)
this must be used to help prevent overheating of your vacuums' motor. Use 'wide open' setting/position at all times.
3. Vacuum adapter
4. 8' surgical tubing

Now Available! - The QuietPRO® CN HEPA Vacuum

- With **QUIETPOWER™** technology
- Three levels of filtration before motor
- Hepa filter on exhaust
- Two-speed switch
- Three-year parts and labor warranty*.



* Some restrictions apply.



TIMAL™
Patent Pending


Dust Free at Last!

We have also enclosed 4 mounting pads (see 'A' in photo) and tie straps so you can attach the hose to your desk lamp, as shown in the photo.

TIP: For easier installation of the hose on the TIMAL™ or regulator, use a little rubbing alcohol.

Because the TIMAL™ attachment is finely machined to fit the MT20, you do not have to remove it to change bits. *TIP: On longer nails, do not push bit all the way in.*

Kathi loves her TIMAL™ attachment and uses it all the time. Her lungs, clothes and workspace are now DUST FREE. You, too, can enjoy a cleaner, healthier work environment.

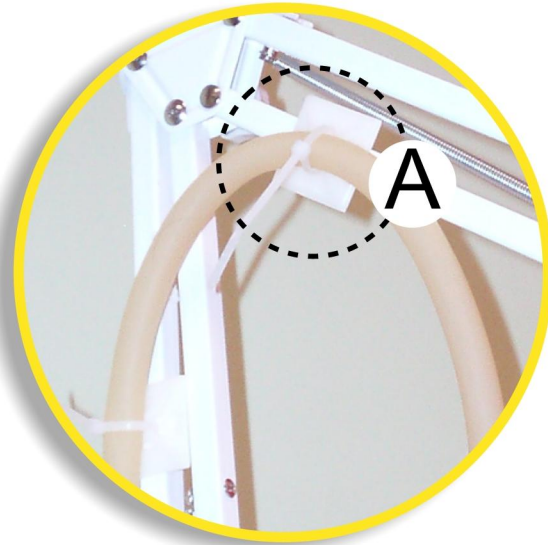

* The dust from nails is extremely fine and can cause premature vacuum motor failure. Other than a properly maintained **QuietPRO®** purchased from *nailbasics* - *nailbasics* assumes no responsibility for any damage caused to your vacuum. Your vacuum should be cleaned out weekly to help reduce any dust that may be getting into the motor.



* The spindle nut cover **MUST** be removed when using the TIMAL™ to prevent dust buildup (*adjustable wrench required; see illustration above*).



9861 - 62 Avenue
Edmonton, AB T6E 0E4
(780) 490-6720
Toll Free (866) 490-6720
www.nailbasics.ca